freedomRail® EDGE 14"X24" UPPER UNIT INSTALLATION GUIDE

REQUIRED TOOLS Power Drill · Level • #2 Phillips Bit -

• 5/16" Drill Bit — Tape Measure



SCAN TO LEARN


For complete installation information including videos to watch and learn visit: OrganizedLiving.com/Installation/freedomRailEDGE

INSTALL RAIL (R)

Stud Finder

The Rail is the primary support component of the freedomRail EDGE system. Ensuring the Rail is mounted level and secure is an important step. The standard height of the Rail is 84" from the floor to the center of the diamond hole \otimes .

• #2 Screwdriver

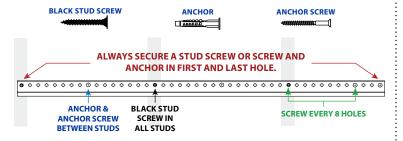


- 1. Review your design to determine Rail length. Standard Rail lengths are 42" or 78" long. Measure and cut your Rail to length if needed.
- 2. At approximately the center of your Rail location measure up 84" from the floor and make a horizontal mark. Then, mark the beginning and end of the Rail on the wall.
- 3. Use a Stud Finder to locate and mark the beginning and end of the stud closest to the 84" horizontal mark.
- 4. Between the stud marks, measure up 84" from the floor and make a horizontal mark.
- 5. Place the Rail on the wall with the horizontal stud line visible through a diamond hole. Use a #2 Philips Bit to drive a Black Stud
 - Screw into the stud, through the diamond hole on the mark.
- 6. Use a Stud Finder to locate and mark the left and right edges of the studs at each end of the Rail. While keeping the Rail level, use a #2 Phillips Bit to drive a Black Stud Screw into the marked stud.
- 7. Mark the beginning and end of the remaining studs. Drive a Black Stud Screw into each of the marked studs. There must be a screw in each stud.
- 8. Next, install Anchors and Anchor Screws Using a 5/16" Drill Bit, drill holes through the wall at the first and last holes, as well as between each Stud Screw, spacing no more than 8" apart.
- 9. Insert an Anchor into each hole, then drive in INSTALL INTO DRYWALL Anchor Screws. IMPORTANT: Allow the screw to turn 6-8 rotations after it's flush with the Rail so the Anchor tightens into a ball behind the drywall.




- 10. If a second Rail is needed, measure and cut it to the correct length. Hold it flush and level with the first Rail, then repeat the installation steps above.
- 12. Once all screws are installed, place the Rail Cover onto the Rail by aligning the Rail Cover slot along the Rail edge. Press down firmly, starting at one end, and run your hands along the entire length and back to ensure a secure fit.

ASSEMBLE UNIT

1. Position the Left and Right Panels with the predrilled holes facing up and the long edgebanded sides facing each other so the panels mirror one another.

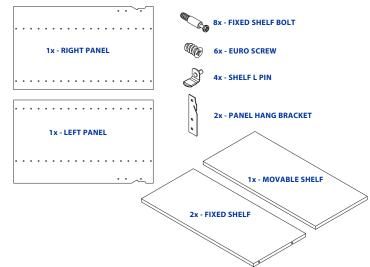


2. Attach a Panel Hang Bracket : to the Left and Right Panel. Using a #2 Screwdriver to insert 3 Euro Screws (a), through each Hang Bracket, into the Panel. Do not overtighten the screws.

 

3. Each Fixed Shelf requires two Fixed Shelf Bolts Shelf Bolts per Panel. Adjust the Drill's clutch to a medium-low setting to avoid stripping holes. Use a #2 Philips Bit to insert four Fixed Shelf Bolts into each Panel at the correct locations: top and bottom

4. Place Panels with edgebanded side on a clean, non-marring surface, approximately 32" apart. Adjust the Cams on each fixed shelf so the arrow is pointing outward.

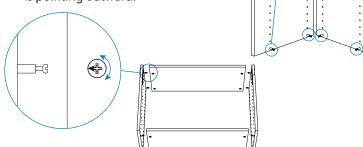





freedomRail® EDGE 14"X24" UPPER CABINET INSTALLATION GUIDE

ASSEMBLE UNIT (CONT.)

- 5. Place the Fixed Shelves between the Panels. Make sure the edgebanded side is down. The Cams for the top Shelf should face up, while the Cams on the lower two Shelves should face down.
- 6. Once the Shelves are in place, slide the Vertical Panels tight to each Shelf. Then tighten each Cam with your #2 Screwdriver, by turning it clockwise until it is tight.

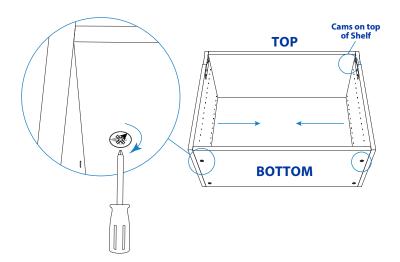


7. Stand the assembled Unit up by lifting from the top, until the Unit is standing vertically. Hang the Unit on the Rail by lifting from the second Shelf until the Hang Brackets are slightly above the Rail. Lower the Unit until both Hang Brackets are secured onto the Rail. If necessary, adjust the Units position by sliding it along the Rail.

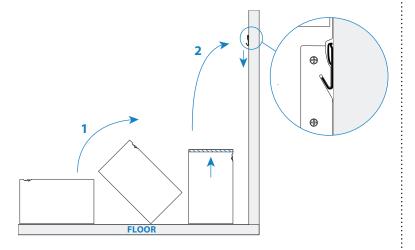


INSTALL MOVABLE SHELVES

1. Insert four Shelf L Pins per Shelf, two in the front and two in the rear holes of each Vertical Panel at the desired shelf location.

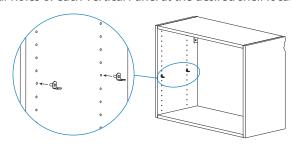


2. Set Movable Shelf on installed Pins.

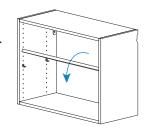

PANEL CLIPS

- 1. Add Panel Clips (PC) below the bottom Shelf, or in a non-visible location.
- 2. Use a Level to plumb Panels.
- 3. Hold the Panel Clip against the wall and Panel, then use a Pencil to mark the diamond hole location.
- 4. Use a $\frac{5}{16}$ Drill Bit to drill a hole through the drywall at the mark.
- 5. Insert an Anchor through the Panel Clip into the drywall. Use a #2 Philips Bit to drive an Anchor Screw into the Anchor and tighten. Fully engage the Anchor by drilling past when the Screw hits the Panel Clip.
- 6. Drive the Panel Clip Screw ******* through the Clip into the Panel.

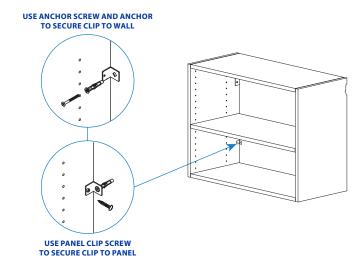

ontact Us.

Phone: 1-888-674-5484 8 am-5 pm EST Mon-Fri. Email: customerservice@organizedliving.com OrganizedLiving.com/Installation

hank You!

freedomRail EDGE is designed to grow with you. Now that assembly is complete, you can easily adjust any component or add new ones at any time, creating a closet that's truly customized to your lifestyle.









