

REQUIRED TOOLS

- Power Drill
- Level
- Stud Finder
- 3/16" & 5/16" Drill Bit
- #2 Phillips Bit
- #2 Screwdriver
- Pencil
- Tape Measure




SCAN TO LEARN.
MIRA Y APRENDE.

SCAN TO LEARN

For complete installation information including videos to watch and learn visit:
OrganizedLiving.com/Installation/freedomRailEDGE

INSTALL RAIL (R)


The Rail is the primary support component of the freedomRail EDGE system. Ensuring the Rail is mounted level and secure is an important step. **The standard height of the Rail is 32" from the floor to the center of the diamond hole**.

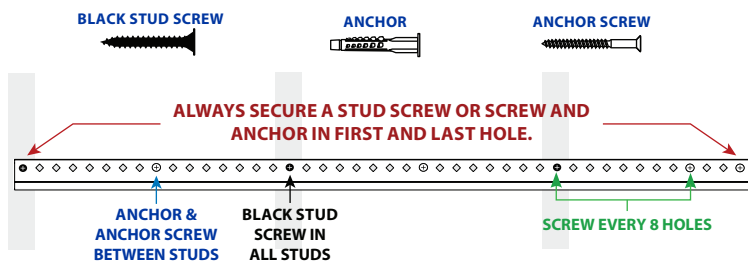


1. A single Lower Unit requires the Rail to be cut to 31½" long. If your design uses multiple Lower Cabinet sections, review your design to determine if you need to cut your Rail.
2. Measure up 32" from the floor and use a Stud Finder to locate and mark the beginning and end of a stud along the length of the Rail. There might only be one.
3. Between the stud marks, measure up 32" from the floor and make a horizontal mark.
4. Place the Rail on the wall with the horizontal stud line visible through a diamond hole. Use a #2 Phillips Bit to drive a Black Stud Screw into the stud, through the diamond hole, on the mark.
4. While leveling the Rail, use a #2 Phillips Bit to drive a Black Stud Screw into the remaining studs.
5. Next, add Anchors and Anchor Screws. Use a 5/16" Drill Bit to drill a hole through the wall in the first and last hole, and between each Stud Screw, no more than 8" apart.
6. Insert an Anchor into each hole and drive in Anchor Screws. **IMPORTANT: Allow the screw to turn 6-8 rotations after it's flush with the Rail so the Anchor tightens into a ball behind the drywall.**
7. Review your design to determine if a second Rail is required. If a second Rail is required and needs cut, measure the Rail and cut it to length.
8. To hang a second Rail, repeat these steps while holding the second Rail flush and level with the first Rail.
9. Once all of the screws are installed, place the Rail Cover on the Rail by aligning the cover slot and Rail edge. Press firmly downwards. Start at one end and slide your hands the entire length of the Cover and back until it is tight.

ASSEMBLE UNIT


1. Remove all of the product from both cartons. Arrange the Left and Right Panel, with the predrilled holes facing up and the long edgebanded sides facing each other.

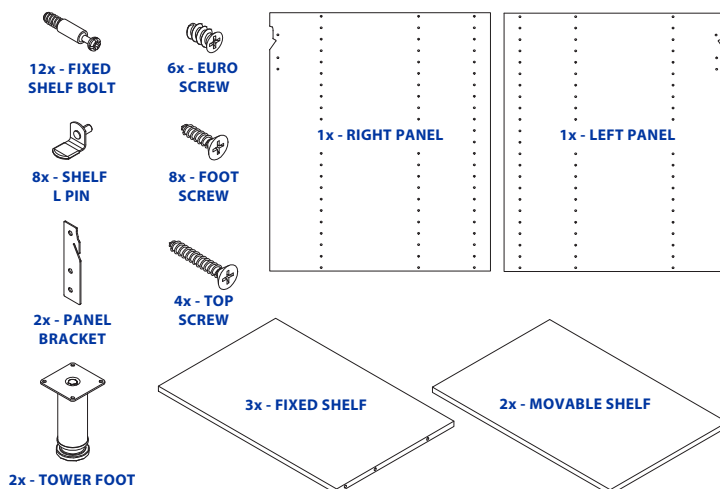


2. Attach a Panel Hang Bracket to the Left and Right Panel. Using a #2 Screwdriver to insert 3 Euro Screws, through each Hang Bracket, into the Panel. Do not over tighten the screws.

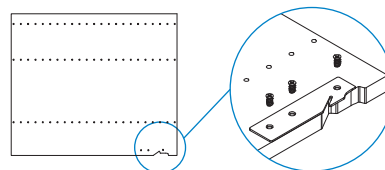

3. Each Fixed Shelf requires three Fixed Shelf Bolts per Panel. Adjust the Drill's clutch to a medium-low setting to avoid stripping holes. Use a #2 Phillips Bit to insert four Fixed Shelf Bolts into each Panel at the correct locations: **top and bottom**

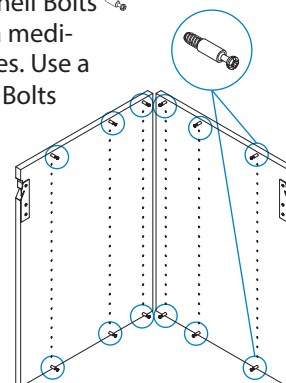


4. Place Panels with edgebanded side on a clean, non-marring surface, approximately 32" apart. Adjust the Cams on each Fixed Shelf so the arrow is pointing downward.

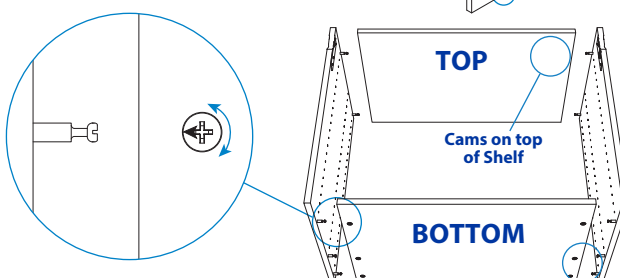


ASSEMBLE UNIT (CONT.)

- Place the Fixed Shelves between the Panels. Make sure the edgebanded side is down. **The Cams for the top Shelf should face up, while the Cams on the lower two Shelves should face down.**
- Once the Shelves are in place, slide the Vertical Panels tight to each Shelf. Tighten each Cam with your #2 Screwdriver, by turning it clockwise until it is tight.

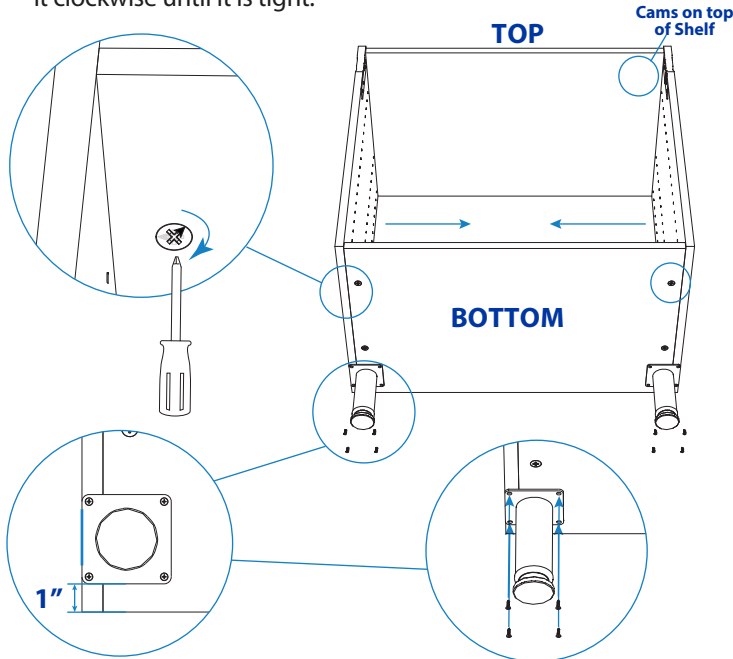


- Using the provided screws, attach two Tower Feet to the bottom of the Unit. Place one edge of the Foot Plate approximately 1" from the front, edgebanded side and one side flush with the side. Then use a #2 Phillips Bit to drive four Foot Screws through the Foot Plate into the panel.
- Stand the assembled Unit up by lifting from the top, until the Unit is standing vertically. Hang the Unit on the Rail by lifting from the second Shelf until the Hang Brackets are slightly above the Rail. Lower the Unit until both Hang Brackets are secured onto the Rail. If necessary, adjust the Units position by sliding it along the Rail. Last, adjust the Foot to meet the floor.

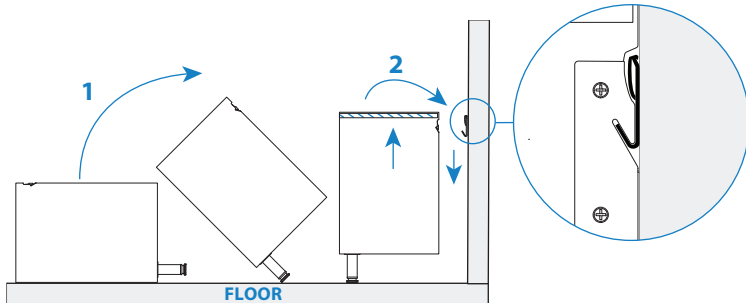


INSTALL TOP AND MOVABLE SHELF

- To install the Top, first drill four $\frac{3}{16}$ " holes through the top Fixed Shelf. Next, align the left and right edges of the Top with each side and the back edge with the back corner. Then Use a #2 Philips Bit to drive four $1\frac{1}{4}$ " screws, through the top Fixed Shelf into the Top.

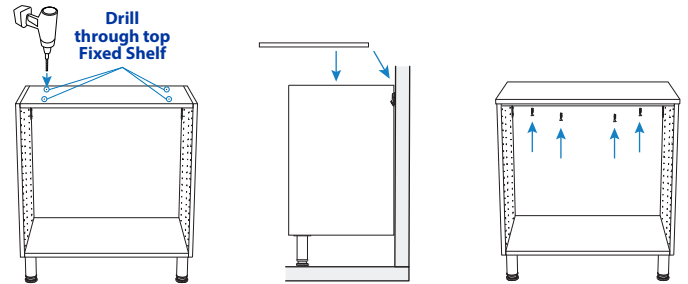


- Insert four Shelf L Pins per Shelf, two in the front and two in the rear holes of each Vertical Panel, at the desired Shelf location. Then, set the Movable Shelf on the installed Pins.

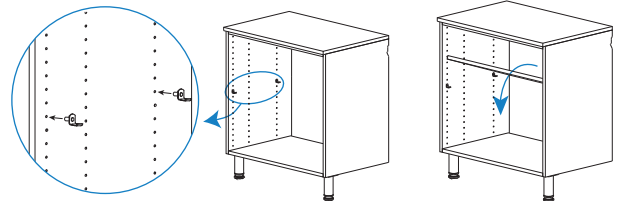

PANEL CLIPS (PC)

- Add Panel Clips (PC) below the bottom Shelf, or in a non-visible location.
- Use a level to plumb the Panels.
- Hold the Panel Clip against the wall and Panel, then use a Pencil to mark the diamond hole location.
- Use a $\frac{5}{16}$ " Drill Bit to drill a hole through the drywall at the mark.
- Insert an Anchor through the Panel Clip into the drywall. Use a #2 Philips Bit to drive an Anchor Screw into the Anchor and tighten. Fully engage the Anchor by drilling past when the Screw hits the Panel Clip.
- Drive the Panel Clip Screw through the Clip into the Panel.

USE ANCHOR SCREW AND ANCHOR TO SECURE CLIP TO WALL

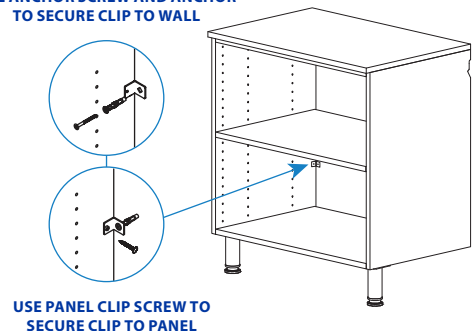

USE PANEL CLIP SCREW TO SECURE CLIP TO PANEL

Contact Us.

Phone: 1-888-674-5484 8 am-5 pm EST Mon-Fri.
Email: customerservice@organizedliving.com
OrganizedLiving.com/Installation

Thank You!

freedomRail EDGE is designed to grow with you. Now that assembly is complete, you can easily adjust any component or add new ones at any time, creating a closet that's truly customized to your lifestyle.