

freedomRail® EDGE HOOK INSTALLATION GUIDE

REQUIRED TOOLS

- Power Drill 
- Level 
- Stud Finder 
- 5/16" Drill Bit 
- #2 Phillips Bit 
- #2 Screwdriver 
- Pencil 
- Tape Measure 



SCAN TO LEARN.
MIRA Y APRENDE.


SCAN TO LEARN



For complete installation information including videos to watch and learn visit:

OrganizedLiving.com/Installation/freedomRailEDGE


INSTALL RAIL (R)

The Rail is the primary support component of the freedomRail EDGE system. Ensuring the Rail is mounted level and secure is an important step. **The standard height of the Rail is 84" from the floor to the center of the diamond hole** .

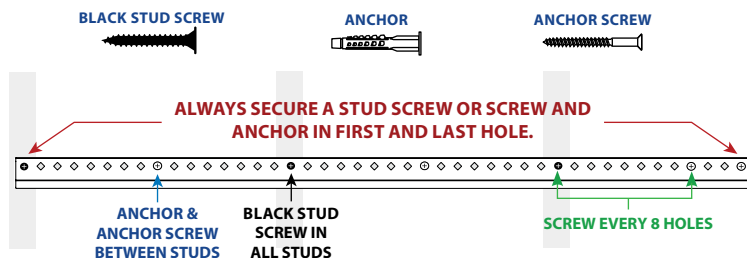


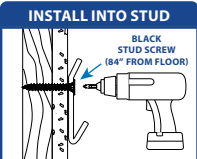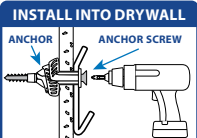1. Review your design to determine Rail length. Standard Rail lengths are 42" or 78" long. Measure and cut your Rail to length if needed.
2. At approximately the center of your Rail location measure up 84" from the floor and make a horizontal mark. Then, mark the beginning and end of the Rail on the wall.
3. Use a Stud Finder to locate and mark the beginning and end of the stud closest to the 84" horizontal mark.
4. Between the stud marks, measure up 84" from the floor and make a horizontal mark.
5. Place the Rail on the wall with the horizontal stud line visible through a diamond hole. Use a #2 Philips Bit to drive a Black Stud Screw  into the stud, through the diamond hole on the mark. 
6. Use a Stud Finder to locate and mark the left and right edges of the studs at each end of the Rail. While keeping the Rail level, use a #2 Phillips Bit to drive a Black Stud Screw into the marked stud.
7. Mark the beginning and end of the remaining studs. Drive a Black Stud Screw into each of the marked studs. There must be a screw in each stud.
8. Next, install Anchors  and Anchor Screws . Using a 5/16" Drill Bit, drill holes through the wall at the first and last holes, as well as between each Stud Screw, spacing no more than 8" apart.
9. Insert an Anchor into each hole, then drive in Anchor Screws. **IMPORTANT: Allow the screw to turn 6-8 rotations after it's flush with the Rail so the Anchor tightens into a ball behind the drywall.** 
10. If a second Rail is needed, measure and cut it to the correct length. Hold it flush and level with the first Rail, then repeat the installation steps above.
12. Once all screws are installed, place the Rail Cover onto the Rail by aligning the Rail Cover slot along the Rail edge. Press down firmly, starting at one end, and run your hands along the entire length and back to ensure a secure fit.

EDGE HOOKS

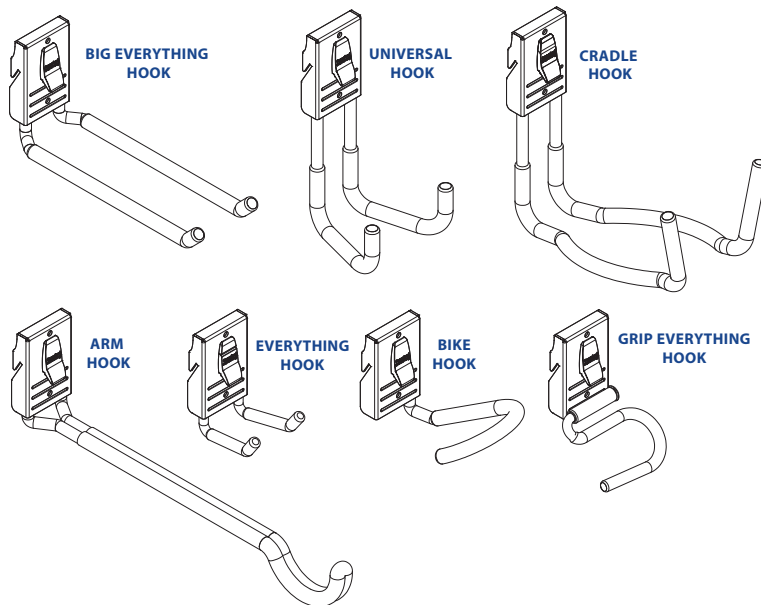

1. To install a hang accessory, pull open the locking mechanism, then align the Rail hook with the slot and let the Hook bracket drop completely onto the Rail.

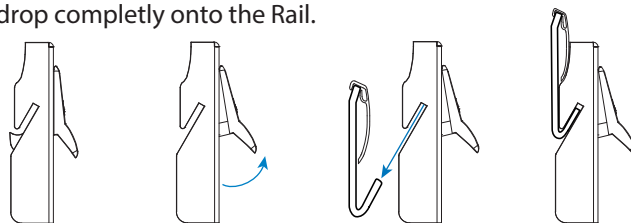

2. Once the Hook is completely seated on the rail, push the lock all the way in until you hear a loud click to confirm the lock is engaged.

