




Contents of Package

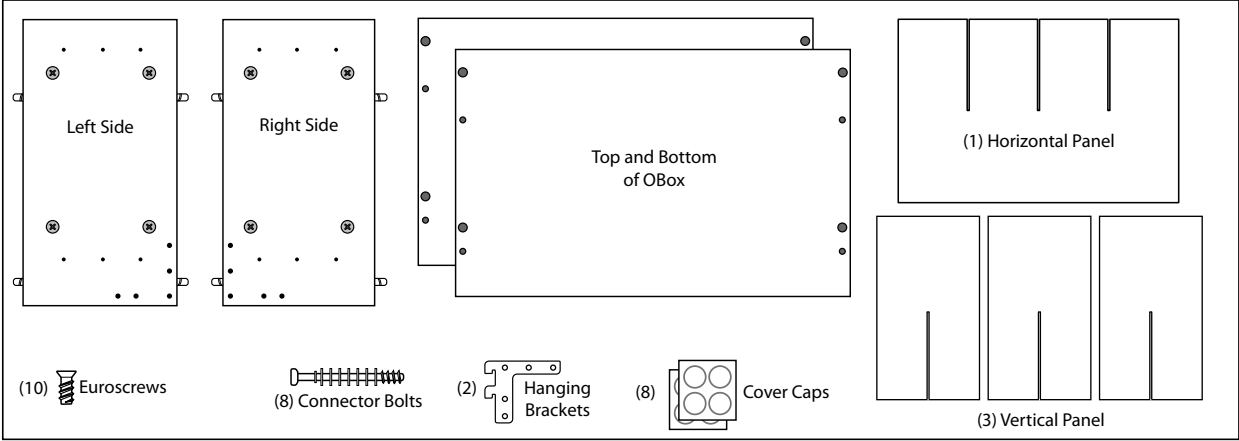


Tools Required

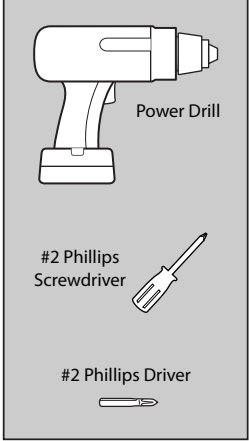


Assembling the Double Hang Cubby OBox

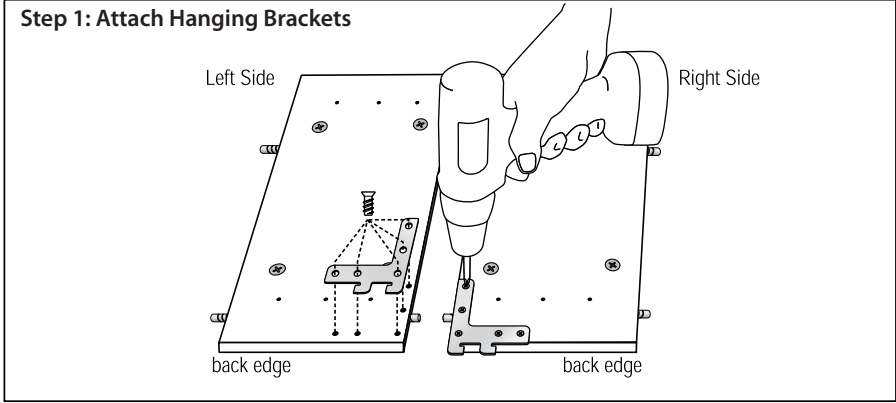


Attach Hanging Brackets to Sides using Euroscrews. (If using power drill, set torque to low setting.)

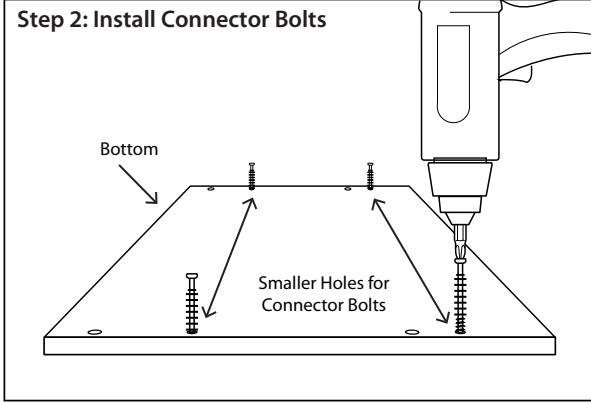


Install (4) Connector Bolts into small holes on Top and Bottom Panels.

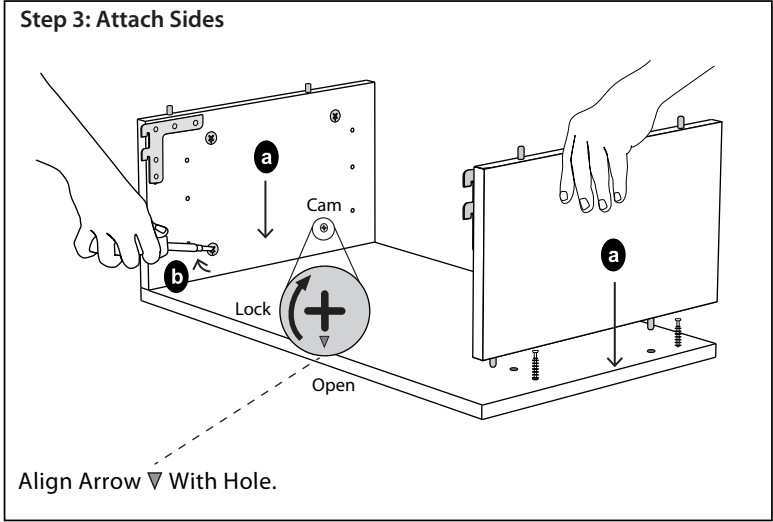



(a) Attach Sides to Bottom. (b) Lock Cams by turning clockwise until snug.

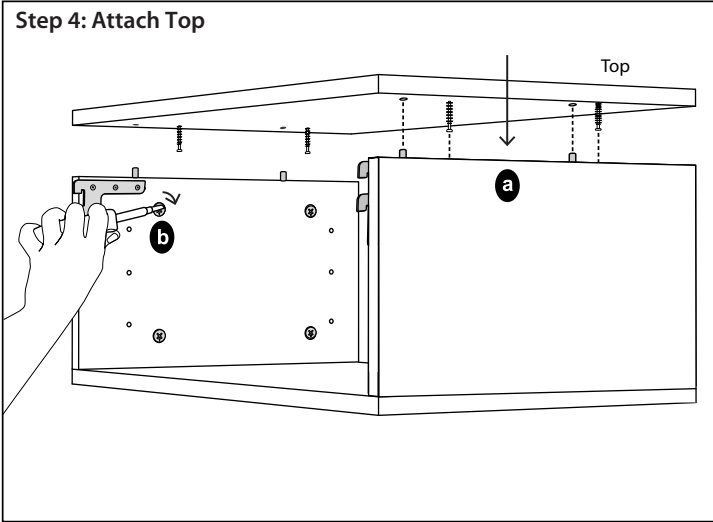

(a) Attach Top. (b) Tighten Cams same as in Step 3.

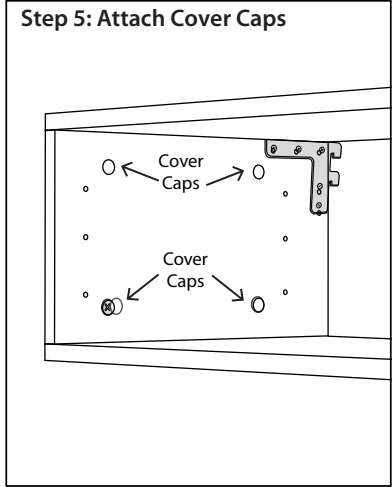

Apply Cover Caps to exposed Cams.

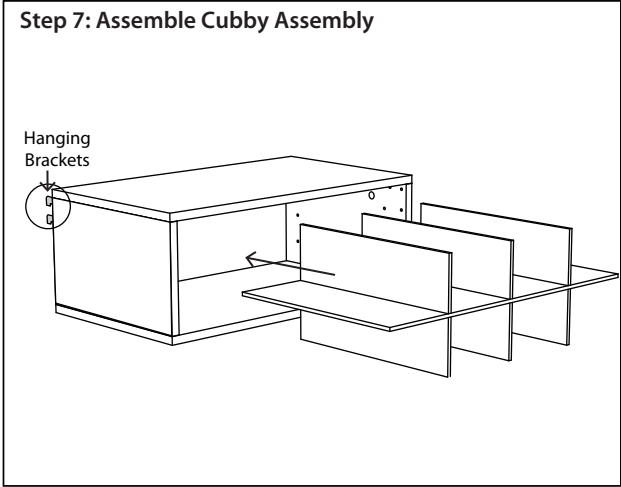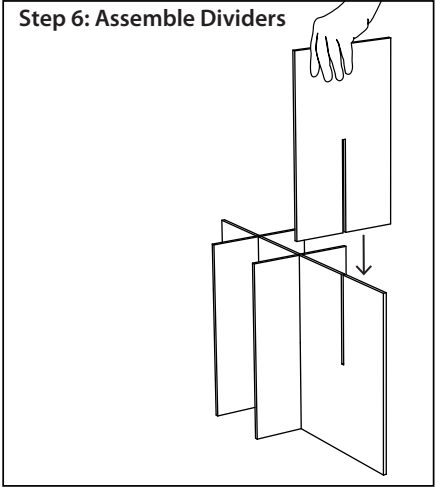

Fit is designed to be snug.
Mount OBox onto Uprights by inserting Hanging Brackets into the innermost track of each Upright.